



PREMIUM

INSTALL GUIDE



MODEL NAME : i40 (VF)

MODEL YEAR : 2011 ~



Kit contents



1. Main Module



2. User Guide



3. Plug n Play Harness



4. Scotch Lock

Required Tools



1. Panel Remover



2. Screw Driver



3. Wire Cutter



4. 10mm
T-handle wrench



5. Tester



6. Stubby Screw




7. Cable Tie

MYKEY Install Guide

Main Module (Behind of Glove box – Passenger Side)


1 Remove Side panel(A) by remover

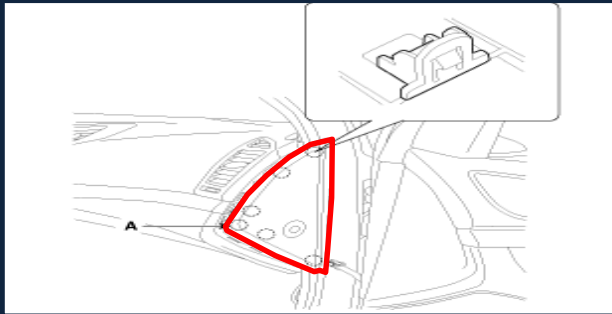

2 Separate Connector(A)




3 Remove stopper(B) in Glovebox(A)

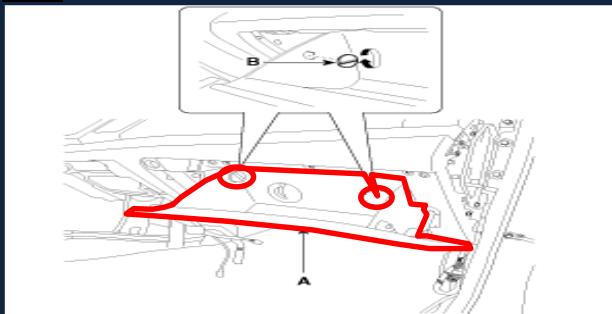


4 Separate Glovebox(B) from lift(A)




5 Remove Lock pin(A) & detach glove box(B)

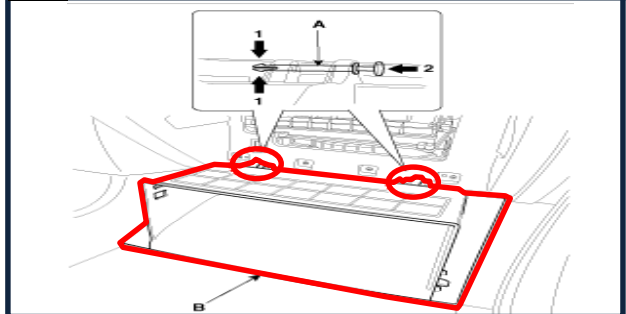


6 Press Lock pin(B) & detach Under cover(A)

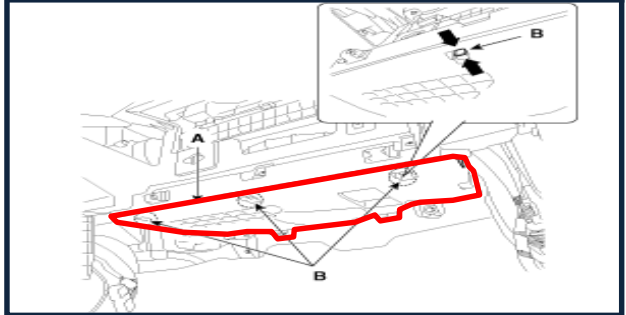

7 Separate Undercover connector(A)

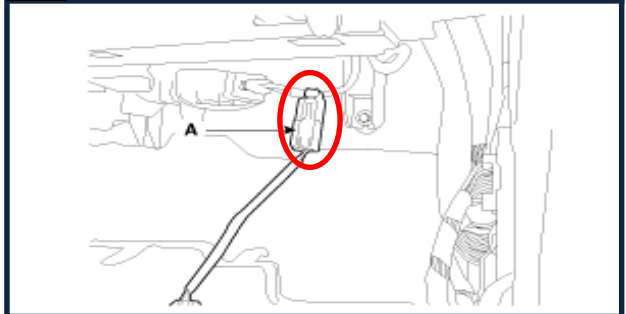


8 Loosen bolts & Remove Glovebox Housing (A)

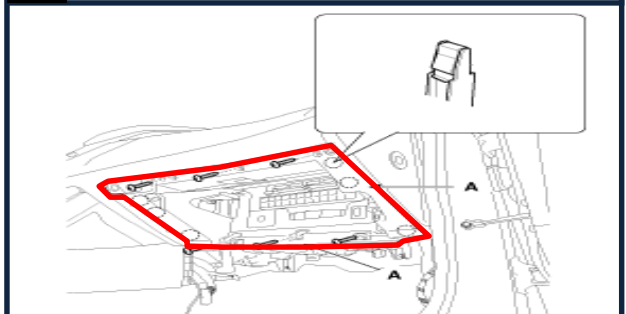


MYKEY Install Guide

Main Module (Behind of Glove box – Passenger Side)

9 Separate Glovebox Lamp connector(A)

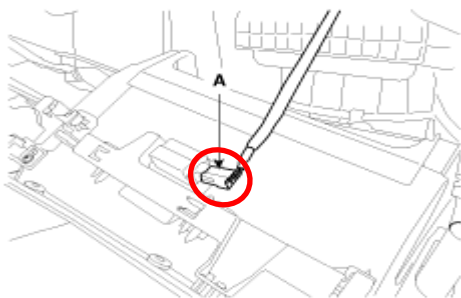

10 Loosen bolts nuts & Remove Smart key Module(A)

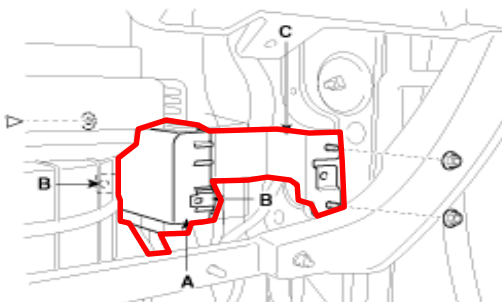

11 Connect PLUG & PLAY Harness kits to "Smart key Module"

